# **User's Manual**



#### Instructions before use:

Thank you for choosing our company's RGB controller. Before using this product, please read this manual carefully to ensure that fully understand the instructions correctly in order to avoid unnecessary damage.

#### After-sales service:

From the day you purchase our products within a year, if being used properly in accordance with the instruction, and quality problems occur, we provide free repair or replacement services except the following cases:

- 1. Any defects caused by wrong operations:
- 2. Any damages caused by unauthorized removal, maintenance, modifying circuit, incorrect connections and replacing chips.
- 3. Any damages due to transportation, breaking, flooding water after the purchase.
- 4. Any damages caused by earthquake, fire, flood, lightning strike etc force majored of natural disasters.
- 5. Any damages caused by negligence, inappropriate storing at high temperature and humidity environment or near harmful chemicals.
- 6. Product has been updated.

## Safety instructions:

In order to ensure the integrity of the state and use of safe, please follow the instructions on this manual and remind:

- 1. Please avoid installation at the minefields, strong magnetic field and high-pressure region.
- 2. Make sure the wiring is correctly and securely, to avoid short-circuit damage components and trigger the fire accident.
- 3. Set the controller installed in a well-ventilated place, in order to ensure a suitable ambient temperature.
- 4. Before using this product, check the DC power supply meets the product requirements, the power of positive and negative whether the definition and product.
- 5. Don't wiring with power.
- 6. If a problem occurs, do not maintenance privately. If you have any questions, please contact the supplier.

#### Features:


- RF and Membrane switch.
- 3-channel output, the maximum output current of 10A per channel
- High-speed microcontroller to process the data, no delay, no flicker
- 8 level brightness adjustment, 8 level speed adjustment, convenient and practical
- 29 built in modes to select
- DC5-24V input
- With power off memory

### **Technical parameters:**

Input voltage	DC 5-24V		
Signal output	RGB Three-channel signal		
Maximum load	10A/channel*3channels		
current			
Output power	360W max(12V) 720W max(24V)		
Controller size	L82.4 * W91 * H25 mm		
Package size	L84 * W93 * H27 mm		
G.W.	232g		

#### Remote control function:

The remote control use a 23A 12V battery. We do not supply batteries for transportation and other reasons.

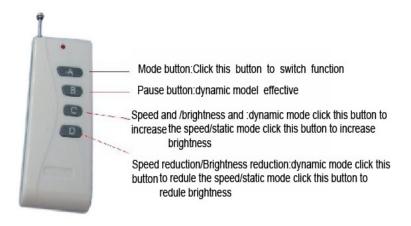


## **Membrane switch function instructions**




: In the static mode click the button to increase the brightness

: In the dynamic mode click the button to reduce the brightness

## Controller size (mm):

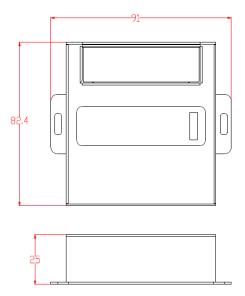

## **Connection diagram:**

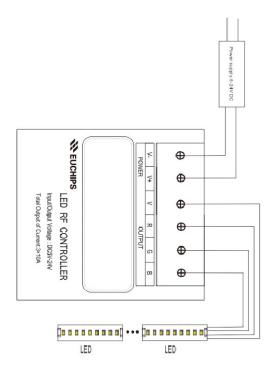

# Function mode introduce:

Mode	Color change	Note	Mode	Color change	Note
1	Static red	Brightness	Mode	White stroboscopic	Speed
		adjustable	16		adjustable
2	Static green	Brightness	17	Red ,green ,blue gradient	Speed
		adjustable			adjustable
3	Static blue	Brightness	18	Full color gradient	Speed
		adjustable			adjustable
4	Static yellow	Brightness	19	Red ,green gradient	Speed
		adjustable			adjustable
5	Static purple	Brightness	20	Red ,blue gradient	Speed
		adjustable			adjustable
6	Static blue	Brightness	21	Green ,blue gradient	Speed
	Static white	adjustable	22	Dad blue avees	adjustable Speed
7		Brightness adjustable		Red, blue ,green guttering	adjustable
8	Three color	Speed	23	white guttering	Speed
	jump	adjustable			adjustable
9	Seven color	Speed	0.4	Red, green guttering	Speed
	jump	adjustable	24		adjustable
10	Red	Speed	25	Red, blue guttering	Speed
	stroboscopic	adjustable	23		adjustable
11	Green	Speed	26	Red, blue guttering	Speed
	stroboscopic	adjustable	20		adjustable
12	Blue	Speed	27	Red, guttering	Speed
	stroboscopic	adjustable			adjustable
13	Yellow	Speed	28	Green, guttering	Speed
	stroboscopic	adjustable			adjustable
14	Purple	Speed	20	Plus quittoring	Speed
	stroboscopic	adjustable	29	Blue, guttering	adjustable
15	Blue	Speed			
	stroboscopic	adjustable			

## Failure analysis and solution:

Fault	Cause analysis	Solution	
phenomenon			
	1. Switching power supply	1. Check the switching	
	without power;	power;	
	2. Positive and negative	2、Corrected;	
Don't light	pick back ;	3、Check the connection;	
	3. Pick the wrong line or	4、Change LED lamp;	
	unstable;		
	4、LED lamp bad;		
	1. Output line too long a	1、Shorten the line or ring	
	pressure drop;	power supply;	
LED brightness	2、Power load is too big;	2. Replace the power of	
uneven		the power supply;	
	3、Relay overload;	3. Increase power	
		expander;	

Warm prompt: Switch power supply effective power is power supply 80% of the mark, so the user to select the power than the load power LED lights a little bigger, at least more than 20%.