

EULP120AD-1H12V (Product No.:100200070101)

Summary

EULP120AD-1H12V is a constant voltage mode output LED driver. This driver complies with DALI standard protocol IEC 62386, and provides multiple dimming function (DALI, 0/1-10V active signal, PWM, adjustable resistance, and Touch DIM) to achieve a smooth dimming effect.

Product Features

- Single channel constant voltage output, 10A Max
- Meet DALI protocol IEC 62386
- High input voltage of 220VAC ~ 240VAC
- Dimming effect smooth, no flicker
- Over load protection; short circuit protection
- IP20, suitable for indoor LED lighting application

Application

For LED constant voltage strip light only



LED Strip Light




LED Tube




Technical Parameters

Model	EULP120AD-1H12V	
Input	Efficiency	90%@230VAC, Full load
	Voltage	220VAC-240VAC
	Frequency Range(Hz)	50/60Hz
	Power Factor	0.98@230VAC, Full load
	THD(full load)	<5%@230VAC, Full load
	Current	0.6Amax@230VAC
	Inrush Current(max)	Cold start, 50A@230VAC
Output	Current(mA)/Voltage (VDC) Power(W)	10A/12VDC/120W
	Channel	1
	Voltage Tolerance	±5%
	No load output voltage	12VDC±5%
	Standby power	<0.5W
	Turn on delay Time	<0.5s, at 230Vac (When the light begins to shine)
Function	Dimming Type	DALI, 0/1-10V
	Dimming Range	0.1%-100% Dimming to off
Protection	Over load	Hiccup, recovers after fault condition is removed
	Short Circuit	after fault removed Close output, the output current recovers automatically
Safety& EMC	Surge	L-N:2KV L&N-GND:4KV
	Withstand Voltage	I/P-O/P: 3000VAC/1min/5mA
	DALI Standard	IEC 62386-101: 2014, IEC 62386-102: 2014; IEC 62386-207: 2009
	Safety Standards	EN61347, GB19510
	EMI Emission	EN55015, EN61000-3-2
	EMC Immunity	EN61000-4-2, 3, 4, 5, 6, 8, 11; EN61547
Others	Working Temp.	-20°C~50°C
	Storage Temp., Humidity	-40°C~85°C, 20-90%RH
	tc	85°C
	Material	Metal
	IP Rating	IP20
	Lifetime	50,000h@tc:85°C
	Warranty Condition	5 years
	Switch Cycle	25,000 times
	Pack Information	Net weight: 350g±5%/PCS; 50PCS/Carton; 18.2kg±5%/Carton; Carton Size:370*326*127mm(L*W*H)
	Dimension	360*30*21mm (L*W*H)



Dimension(mm)

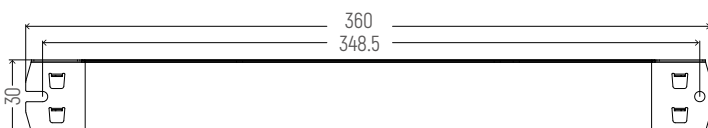


Wiring

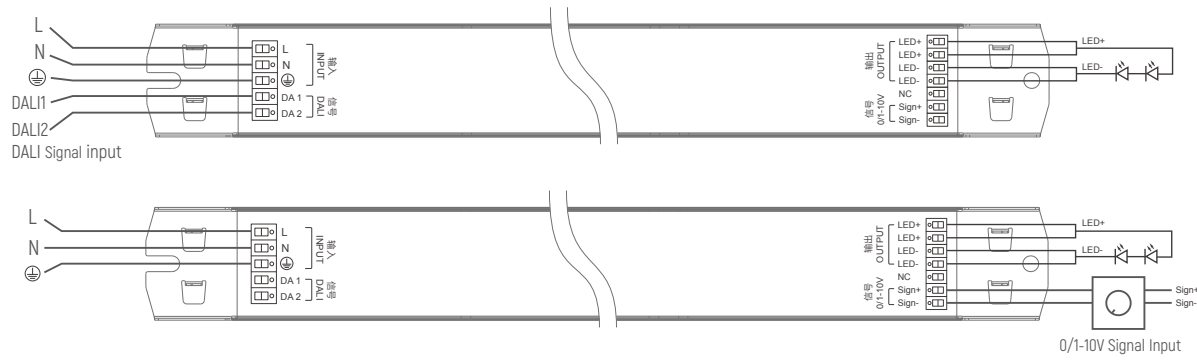

Dimming Curve

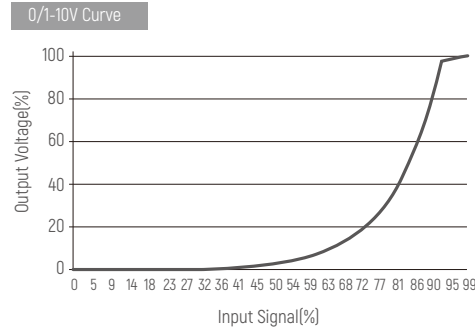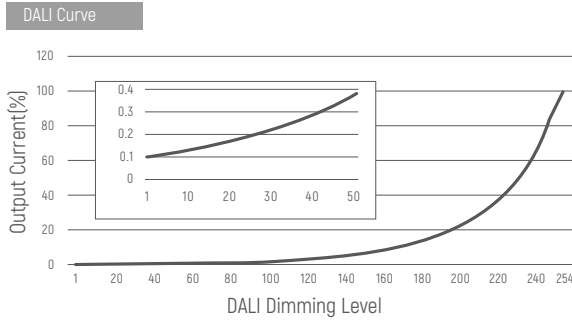

Push DIM(Touch DIM) Diagram

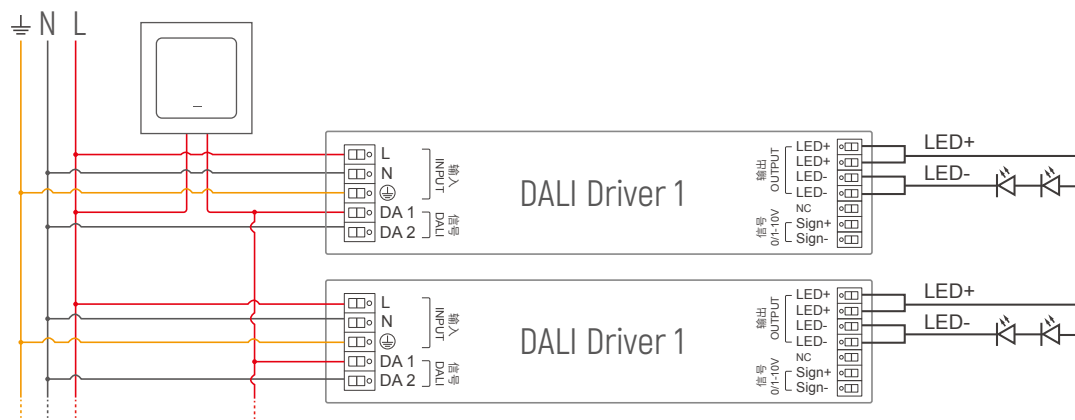

Remark: Only use open push button without indicator light. Maximum cable length between each Unit: 20 meters.

Push DIM Function

1. Short press the Touch DIM switch (<0.5s) to control the lamp on or off.
2. Long press the Touch DIM switch (>0.5s) to dim the brightness of light. The dimming direction will change every time after pressing switch.
3. Double-click the Touch DIM switch (<0.3s), then all lamps connected on the device will be set maximum brightness.
4. The brightness adjustment range is 0.1%-100%, and the light can be turned off through short pressing when doing the adjustment with long pressing Touch DIM switch.
5. With the Power off memory function, the power-down state will be recovered when power on again.

Cautions

1. This product should be installed by qualified personnel.
2. This product is non waterproof, need to avoid sun and rain. In case of outdoor use, please ensure it is mounted in a water proof enclosure.
3. Good heat dissipation conditions extend product life. Please install the product in a well-ventilated environment.
4. Please make sure LED power supply output voltage, current is used to meet the product requirements.
5. Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current. Please also ensure that the cable is secured tightly in the connector.
6. Due to safety concerns, PVC or rubber cord of 0.75- 1.5mm² is recommended for input and output terminal(s) (excluding signal terminals). Flat power cord is not suitable. Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
7. In case of malfunction, do not repair it yourself.

※ The contents of this manual are updated without prior notice. If the function of the product you are using is inconsistent with the instructions, the function of the product shall prevail. Please contact us if you have any questions.

EULP120AD-1H12V (产品代码:100200070101)

概述

EULP120AD-1H12V是一款恒压输出的LED调光驱动器。这款驱动器符合DALI标准协议IEC62386。支持DALI,0/1-10V有源信号，可调电阻，PWM, Touch DIM多种调光方式。

产品特点

- 单通道恒压输出，最大输出电流为10A
- 遵循DALI协议标准 IEC62386
- 宽电压输入：220VAC~240VAC
- 过载保护，短路保护
- 调光曲线平滑，无闪烁
- IP20，适用于室内LED灯具

应用

仅用于LED恒压灯带



LED灯带





LED硬灯条




技术参数

型号	EULP120AD-1H12V	
输入	效率	90%@230VAC, 满载
	电压	220VAC-240VAC
	频率	50/60Hz
	功率因素	0.98@230VAC, 满载
	THD	<5%@230VAC, 满载
	电流	0.6Amax@230VAC
	浪涌电流	冷启动,50A@230VACC
输出	电流/电压/功率	10A/12VDC/120W
	通道	1
	电压公差	±5%
	空载电压	12VDC±5%
	待机功耗	<0.5W
	启动延时	<0.5s, at230Vac
功能	调光方式	DALI 调光 0/1-10V
	调光范围	0.1%-100% 变暗直至关闭
保护	短路	关闭输出，排除故障后自恢复
	过载	超过输出电流，打嗝保护,关闭输出，排除故障后自恢复
安全 & 电磁兼容	浪涌	L-N:2KV L&N-GND:4KV
	耐压标准	I/P-O/P: 3000VAC/1min/5mA
	DALI 标准	IEC 62386-101: 2014, IEC 62386-102: 2014; IEC 62386-207: 2009
	安全标准	EN61347, GB19510
	电磁兼容	EN55015, EN61000-3-2
	EMC抗扰度	EN61000-4-2, 3, 4, 5, 6, 8, 11; EN61547
其它	工作温度	-20°C~50°C
	储存温度、湿度	-40°C~85°C, 20-90%RH
	tc	85°C
	材质	金属
	防水等级	IP20
	寿命	50,000小时@tc:85°C
	质保	5年
	开关周期	25,000次
	包装信息	净重: 350g±5%/PCS; 50PCS/Cartron; 18.2kg±5%/箱; 外箱尺寸:370*326*127cm[长*宽*高]
	尺寸	360*30*21mm (长*宽*高)


尺寸(mm)

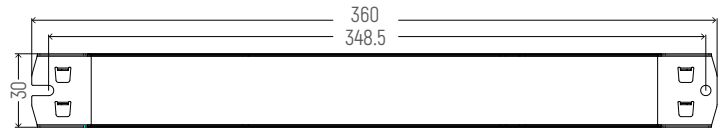


接线图

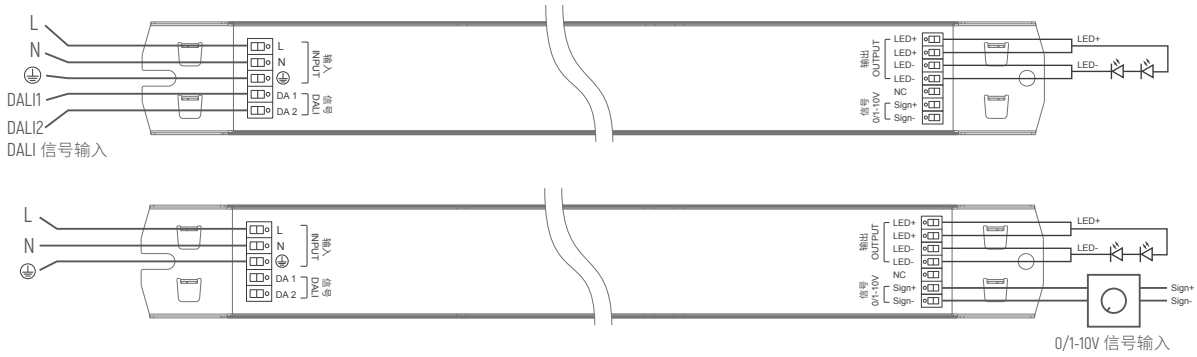

调光曲线

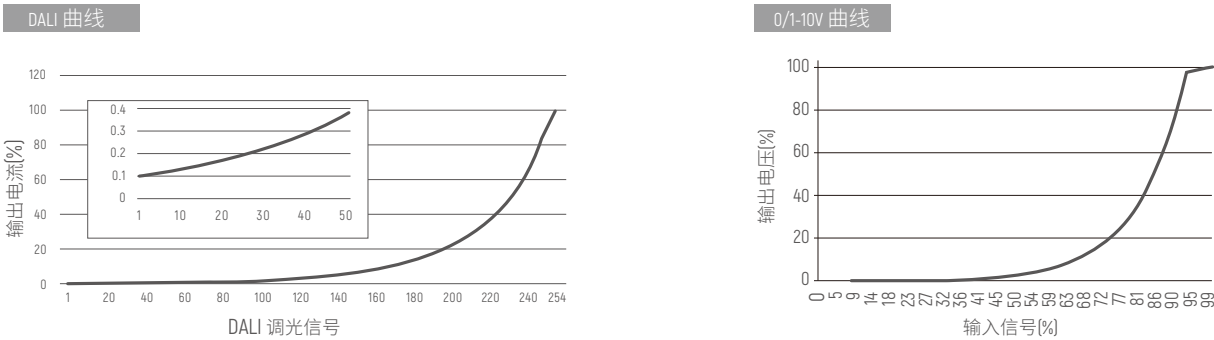

Push DIM Panel(Touch DIM)

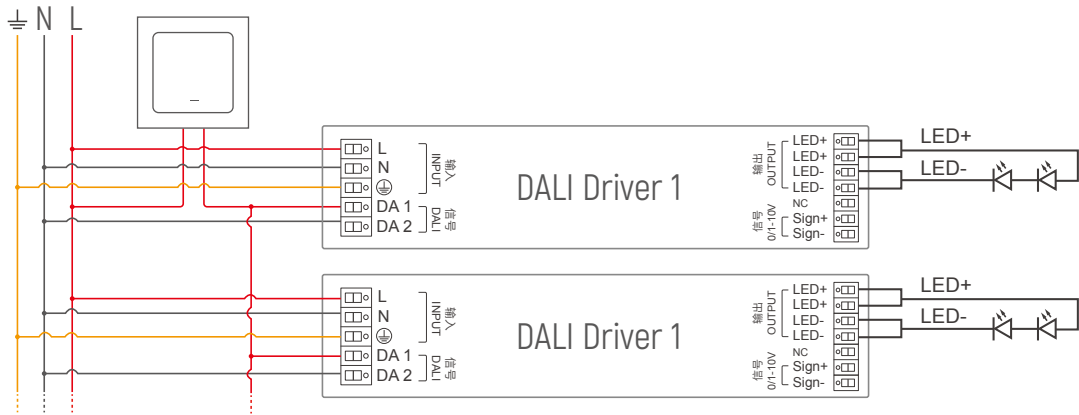

备注: 只能使用开路的按压式开关(不带指示灯). 采用同步连线时每个设备和设备之间的线长不超过20米.

Push DIM 功能

- 1.短按Touch DIM 开关 (<0.5秒) 进行开或关的控制。
- 2.长按Touch DIM 开关 (>0.5秒) 进行灯具的亮度调节，光是调亮还是调暗，随着每次按压的开关变化而变换。
- 3.双击Touch DIM 开关 (<0.3秒)，连接的所有灯具将达到最亮状态。
- 4.亮度调节范围为0.1%-100%。
- 5.具有断电记忆功能，重新上电将恢复到上一次断电的状态。

注意事项:

- 1、本产品请由具有专业资格的人员进行调试安装。
- 2、本产品不能防水，需避免日晒雨淋，如安装在户外，请用防水箱。
- 3、良好的散热条件会延长产品的使用寿命，请把产品安装在通风良好的环境。
- 4、请检查使用的LED电源输出电压电流，是否符合产品要求。
- 5、出于安全考虑，推荐输入和输出（信号端除外）用0.75-1.5mm² PVC或橡胶线缆，并确保接线牢固，以免电线过热或接触不良触发事故。扁平电源线不适用。
- 6、通电调试前，应确保所有接线正确，以避免因接线错误而导致灯具损坏。
- 7、如果发生故障，请勿私自维修；如果有疑问，请联系供应商。

※ 本说明书内容如有更新，恕不另行通知。若您使用的产品功能与说明书不一致时，请以产品为准。如有疑问请与我们联系。